

AUTOMATIC TRANSAXLE FLUID

ON-VEHICLE INSPECTION

1. CHECK FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

Fluid temperature:

70 to 80°C (158 to 176°F)

- (a) Park the vehicle on a level surface and set the parking brake.
- (b) With the engine idling and the brake pedal depressed, move the shift lever to each position from the P to L position, and return it to the P position.
- (c) Take out the dipstick and wipe it clean.
- (d) Fully push the dipstick back into the pipe.
- (e) Take the dipstick out and check that the fluid level is in the HOT range.

If the level is not in the HOT range, add transaxle fluid.

CAUTION:

Wear gloves when working.

